



Warning! Important Safety Instructions

CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

This symbol indicates high voltage is present inside. It is dangerous to make any kind of contact with any inside part of this product.



This symbol alerts you that important literature concerning operation and maintenance have been included with this product.



Note to CATV system installer:

This reminder is provided to call CATV system installer's attention to Article 820-40 of the national Electrical Code that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

Caution : Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Caution : To prevent electric shock, match the wide blade of plug to the wide slot, and fully insert the plug.

Splashing water warning as follow

Caution : The apparatus shall not be exposed to water (dripping or splashing) and that no objects filled with liquids, such as vases, should be placed on the apparatus.

Important : One Federal Court has held that unauthorized recording of copyrighted TV programs is an infringement of U.S. copyright laws.

To prevent damage which may result in fire or electric shock hazard, do not expose this appliance to rain or moisture.



Always be careful when using this product.

To reduce the risk of fire, electrical shocks, and other injuries, keep these safety precautions in mind when installing, using, and maintaining your Receiver.

Information to User

This equipment has been tested and found to comply with the limits for A Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or TV technician for help.
- Explanation of disconnection from mains supply as follow, or equivalent,
To disconnect power from the mains, pull out the mains cord plug.
When installing the product, ensure that the plug is easily accessible.

Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, or other apparatus.
[including amplifiers] that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug.
A polarized plug has two blades with one wider than the other.
A grounding type plug has two blades and a third grounding prong.
The wide blade or the third prong are provided for your safety.
If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, Convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.
When used, caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel.
Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions.

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference that may cause undesired operation.

This satellite receiver provides display of television closed caption in

According with §15.119 of the FCC rules.

MISE EN GARDE

ATTENTION : POUR PRÉVENIR LES RISQUES D'ÉLECTROCUTION, NE PAS DÉMONTER LE COUVERCLE (NI LE PANNEAU ARRIÈRE). L'UNITÉ NE CONTIENT PAS DE PIÈCES RÉPARABLES PAR L'UTILISATEUR. S'ADRESSER À UN SERVICE APRÈS-VENTE QUALIFIÉ.



4

Consignes de sécurité importantes

- 1) Lisez les consignes ci-dessous.
- 2) Conservez ces consignes en lieu sûr.
- 3) Faites attention à tous les avertissements.
- 4) Suivez toutes les instructions.
- 5) N'utilisez pas cet appareil près de l'eau.
- 6) Utilisez un chiffon sec seulement pour épousseter l'appareil.
- 7) Ne bloquez pas les ouïes de ventilation. Installez l'appareil conformément aux instructions du fabricant.
- 8) Ne placez pas l'appareil près d'une source de chaleur, telle qu'un radiateur, un registre de chaleur ou tout autre appareil électrique qui dégage de la chaleur (y compris les amplificateurs).
- 9) Ne contournez pas les dispositifs de sécurité des fiches polarisées ou dotées d'une mise à la terre.

On distingue une fiche polarisée par ses deux lames, dont l'une est plus large que l'autre.

Une fiche du type mise à la terre comporte deux lames et une broche de mise à la terre.

La lame large des fiches polarisées et la broche de mise à la terre sont fournies par mesure de sécurité.

Si la prise murale ne correspond pas à l'une ou à l'autre de ces fiches, consultez un électricien à des fins de remplacement de la prise défectueuse.

- 10) Protégez le cordon d'alimentation contre le piétinement et le coincement par des objets. Faites attention en particulier à la fiche, aux prises de courant et au point de sortie de l'appareil.

- 11) N'utilisez que les accessoires indiqués par le fabricant.

- 12) Placez l'appareil uniquement sur un chariot, un socle, un trépied ou un support recommandé par le fabricant, ou vendu avec l'appareil.

Si vous déplacez la combinaison chariot-appareil, usez de précaution afin d'éviter des blessures si elle venait à basculer.

- 13) Débranchez cet appareil en cas d'orages ou durant de longues périodes de non-utilisation.

- 14) Confiez toutes les réparations à un technicien qualifié.

Cet appareil doit être réparé dans des cas suivants : endommagement du cordon d'alimentation ou de la fiche, pénétration d'un liquide ou d'un objet dans l'appareil, exposition de l'appareil à la pluie ou à l'humidité, mauvais fonctionnement ou chute de l'appareil.



Ce périphérique est conforme à la Section 15 de la réglementation du FCC.

Son utilisation est assujettie aux deux conditions suivantes :

- (1) Ce périphérique n'est pas censé causer d'interférences nuisibles.
- (2) Ce périphérique doit accepter de recevoir toute interférence, y compris des interférences non désirables qui pourraient en perturber le fonctionnement.

Ce récepteur de signaux satellite permet l'affichage des sous-titres codés des émissions télévisées conformément aux règlements de la Section 15.119 du FCC.

Safety Instructions

This product has been manufactured to satisfy the international safety standards. Please read all of safety and operating instructions before operating the product and keep this manual for future reference.

MAIN POWER SUPPLY

AC 100-240V~, 50/60Hz.

Operate your product only from the type of power supply indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your local power company. Disconnect the STB from the mains before you start any maintenance or installation procedures.

OVERLOADING

Do not overload a wall outlet, extension cord or adapter as this may result in electric fire or shock.

LIQUIDS

The product should not be exposed to any liquids such as dripping or splashing. No objects filled with liquids, such as vases, should be placed on the apparatus.

CLEANING

Before cleaning, disconnect the product from the wall outlet. Use a cloth lightly dampened with water (no solvents) to clean the exterior.

VENTILATION

The slots on top of the product must be left uncovered to allow proper airflow to the unit. Do not stand the product on soft furnishings or carpets. Do not expose the product to direct sunlight, place it near a heater. Do not stack electronic equipment on top of the product.

ATTACHMENTS

Do not use any attachment that is recommended by the manufacturer; it may cause a hazard or damage the product.

CONNECTION TO THE SATELLITE DISH LNB

Disconnect the product from the mains before connecting or disconnecting the cable from the satellite dish. Failure to do so can damage the LNB.

CONNECTION TO THE TV

Disconnect the product from the mains before connecting or disconnecting the cable from the satellite dish. Failure to do so can damage the TV.

LOCATION

Place the product indoors in order not to expose to lightning, rain or sunlight. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifier) that produce heat.

LIGHTNING, or NOT IN USE

Unplug the product from the wall outlet and disconnect the cable during a lightning storm or when unused for a long time.

SERVICING

Do not attempt service this product yourself, as opening or removing covers may expose you to dangerous voltage or other hazard. Refer all servicing to qualified service personnel.

"The mains plug is used as the disconnect device. The disconnect device shall remain readily operable."

Before You Begin

General Features

- Accurate, Brilliant Friendly OSD with Full Function
- MPEG-2 & Fully DVB Compliant
- MPEG-2 Video (MP@ML), MPEG-1 Audio Layer1, Layer2
- RF-Modulator CH3 or CH4
- LNB Controlling Logic (0/22kHz Tone)
- SCPC/MCPC Receivable from C /Ku-Band Satellites
- Digital Tuner with Loop-through
- Wide Symbol Rate 1~45Mbps & Frequency Input 950~2150MHz
- DiSEqC 1.0, 1.1 & 1.2 Supported (Go to X function)
- Y,Pb,Pr Video or S-Video OUT
- 256 Colors Graphic User Interface
- Multi-language Menu
- 4-digit 7-segment LED Display
- Installation by Easy Setup Guide
- 8,000 Channels Storing
- User-friendly Data Editing Function
- Favorite Channel and Parental Lock Function
- RS232C for Additional Information Services and Upgrading System Software

Accessories

- User's Manual
- Remote Control Unit
- Batteries (AAA)
- RCA Cable (Optional)

- 1 Power (⏻) button**
Turns your receiver On/Off.
- 2 Arrow (◀/▶) buttons (Optional)**
Adjusts the volume and moves the cursor left/right on the menu.
- 3 Arrow (▲/▼) buttons**
Changes channels or moves the cursor up/down on the menu.
- 4 MENU button (Optional)**
Displays the menu.
Exits from the current menu or goes to the previous menu.
- 5 OK button (Optional)**
Confirms selection.
- 6 DISPLAY (Optional)**
Displays channel information.
Displays local time in Standby mode.


Diagram of the back of the device showing various ports and labels. The ports are numbered 1 through 13. 1: Digital Satellite Receiver (DVR) label. 2: RF IN. 3: AUDIO OUT LEFT. 4: AUDIO OUT RIGHT. 5: RIGHT VIDEO OUT. 6: VIDEO OUT. 7: COMPONENT OUT (Y, Pb, Pr). 8: S-VIDEO. 9: OPTICAL. 10: STOP CONTROL. 11: RF OUT. 12: Video Out (S-Video) and Video Out (RCA) labels. 13: SERIAL. A caution label is also present near the serial port.

- Öä dā cā Ó Á Ü Q c!} aä } aÁ Á , È • ää ääB { Á Á a • Ö , • ää ääB {

Remote Control Unit

- 22F2**
NTSC / PAL Conversion.

Connections

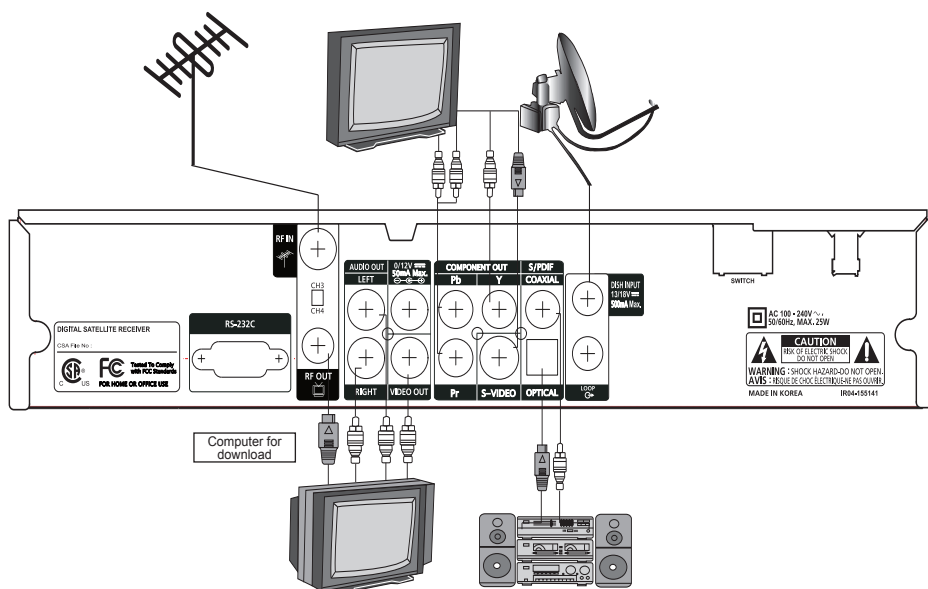

Location of your receiver

- Install your receiver in horizontal position.
- Do not put any heavy stuff such as a TV on your receiver.
- Do not install your receiver in the places as follows: Vibrating place, direct sunrays, Humid place, too high or low temperature, and no ventilated place.

Connecting your receiver with dish system

After installing your antenna system, connect the coaxial cable from the LNB of your antenna to “DISH INPUT” terminal marked at the rear panel of your receiver. All cable connectors should be finger-tightened; do not use any kind of wrench while tightening connectors. The cable should be 75 ohm impedance coaxial twisted at the end with an “F” type connector.

Connecting your analog receiver

To facilitate the user using analog receiver to view analog channels, this product has been provided with a loop through terminal marked as “LOOP.” Connect the coaxial cable from this terminal to the IF input terminal of your analog receiver. Now by keeping your receiver in standby, you will be able to tune and view analog channels from your analog receiver.

Connecting your receiver to TV

To connect your receiver with your television, you can use three different methods; via RF cable, RCA cable, S-Video or Y,Pb,Pr cable.

Connect the RF cable to the terminal marked “RF OUT” on the rear panel of your receiver and its other end to the TV RF input socket.

Connect the Video/Audio RCA cables from the VIDEO OUT/AUDIO OUT (LEFT, RIGHT) on the rear of your receiver to the VIDEO INPUT/AUDIO INPUT (LEFT, RIGHT) jacks on the TV.

In the case of connecting your TV through S-Video or Y,Pb,Pr cable, connect the S-Video or Y,Pb,Pr connector marked TV to the respective S-Video or Y,Pb,Pr port on the TV.

(depend on model)

Connecting external audio/Hi-Fi system

To connect any external Audio Hi-Fi system, your receiver has been provided with two RCA connectors at the rear panel of your receiver, marked with AUDIO L and R respectively to connect the left and right Audio on the external audio/Hi-Fi system.

Connecting digital audio system

Connect a coaxial and optical cable cable between S/PDIF OUT coaxial and optical at the rear panel of your receiver and S/PDIF INPUT coaxial and optical on the Digital Audio System.

Initial Settings and Operations

Menu Information

A menu is a field of text shown on the TV screen. Selectable lines are generally activated (highlighted). No-activated lines cannot be selected. Most of menus show short information at the bottom of the screen.

This menu consists of 7 main menus:


- Installation
- System Setup
- Channel Setup
- Parental Lock
- Game

- 1 Using the **Arrow (▲/▼)** buttons you can move upwards and downwards on the menus. On the menus, you can search channels using this button.
- 2 When you have reached the required subject menu, press the **OK** button to confirm your choice.
- 3 On the menus, you can select menu items using the **Arrow (◀/▶)** buttons.
- 4 When you want to return to the previous menu with saving the change, press the **Back or Exit (↶)** button.
- 5 When you want to exit from the current menu, press the **Menu (⏏)** button.

Getting Started

To start your receiver for the first time, you must select the language for displaying menus and you should set parameters for system configuration and scan satellite channels. Perform the following setup procedure for scanning the satellite. Follow the instructions below to scan satellite channels. You can enjoy watching TV or listening to the Radio after the procedure completes.

- 1 Turn on your TV and receiver.
Language Setting menu will appear automatically.
OSD Language is highlighted.

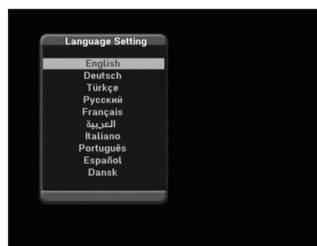

Selecting the On Screen Display (OSD) Language

- 2 Select the OSD language of your choice using the **Arrow (◀/▶)** buttons.
You will see the selected language on the OSD menu.
- 3 Select **Installation** using the **Arrow (◀/▶)** buttons.

-
- Antenna Setting**
- | | | |
|-------------|--------------|----------|
| Galaxy25 KU | LNB Power | On |
| Galaxy25 C | Longitude | 87.0°W |
| Galaxy23 C | LNB Type | Standard |
| Brasilet B2 | LNB Freq | 10750 |
| Brasilet B4 | DiSEqC Port | Off |
| AMC 6 | Tone 22kHz | Off |
| AMC 5 | Switch 0/12V | 0 V |
| AMC KU | Motor | Off |
| | DiSEqC 1.1 | Off |
-

-
- Auto Scanning**
- | | | | |
|--------------|-----|--------------|-----|
| Galaxy75 KU | Off | Brasilest B3 | Off |
| Galaxy75 C | Off | AMC3 C | Off |
| Galaxy23 C | Off | AMC3 Ku | Off |
| Brasilest B2 | Off | Galaxy28 C | Off |
| Brasilest B4 | Off | Galaxy28 Ku | Off |
| AMC 6 | Off | Galaxy11 C | Off |
| AMC 5 | Off | Galaxy11 Ku | Off |
| AMC9 KU | Off | Galaxy26 C | Off |
- ☒ Switch
 ☒ Move
 ☒ Scan
- ☐ Exit

Basic Operation

This section explains various functions while watching TV or listening to the Radio.

Switching Channel

You can switch the current channel by three different methods.

- **Method 1:** Press the **Arrow** (▲/▼) buttons or **PR+/-** buttons.
- **Method 2:** To select a channel directly, select a channel using the **Numeric (0~9)** button.
- **Method 3:**
 - 1 To display the channel list, press the **OK** button.
 - 2 Select a channel you want to watch using the **Arrow** (▲/▼) buttons and then press the **OK** button.
 - If there are multiple channels, use the **Page** (▲/▼) or the **Arrow** (◀/▶) buttons to move to channels by page.
 - Press the **TV/Radio** (📺/📻) button to switch between the TV and Radio channel.
- **Method 4:** In case of more than two scanned satellites
 - 1 Press the **SAT**(📶) button to show satellite list.
 - 2 Move the cursor to the satellite of a channel to watch with the **Arrow** (◀/▶) buttons and then press **OK** button.
 - 3 You can follow the method 3 instruction for channel selecton.
- **Method 5:** How to move to the watched channel.
 - 1 Press the last button with RCU.
 - 2 Press **OK** button after a channel selection by using the **Arrow** (▲/▼) with RCU.
 - 3 Press **OK** button to exit.

Volume Control

To control the volume:

- Press the **VOL+/-** or the **Arrow** (◀/▶) buttons.
- Press the **Mute** (🔇) button to turn the sound off.
- Press the **Mute** (🔇) button again or the **VOL+/-** or **Arrow** (◀/▶) buttons to cancel muting.

Info Bar

Channel information always appears for a specific period of time whenever you switch channels.

General Information

Press the **INFO** (i) button; you can see general information of the current channel.

- ❶ Channel number and name
- ❷ Current time
- ❸ Signal Level
- ❹ Signal Quality
- ❺ Icons: Favorite channel, Locked channel, Radio Channel, Scrambled channel, Subtitle, Teletext information,
- ❻ EPG information.
- ❼ Conditional Access **Detailed Channel Information**


You can see detailed channel information pressing the **INFO** (i) button again.

- ❽ Detailed channel information
- ❾ Satellite, Frequency, Symbol Rate, FEC, Polarity, Video PID, Audio PID, PCR PID, Transponder
- ❿ Display the stream information.

Selecting the soundtrack

You can select the audio language, soundtrack, or sound mode.

- ❶ Press the **Audio (Yellow)** button.
- ❷ Press the **Arrow (▲/▼)** buttons to select the audio language or soundtrack and press the **OK** button.
- ❸ Press the **Arrow (◀/▶)** buttons to select the sound mode from **Stereo**, **Mono left**, or **Mono Right**.
- ❹ Stream information.

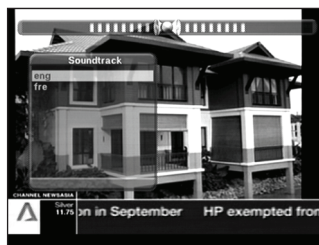

MoSAic

You can see multi picture by pressing the **RED(MoSAic)** button.

Sleep Timer Function

Press the **GREEN(Sleep)** button, you will see the time set for the sleep timer if already set from the Time Setting menu.

Zoom Function

You can make the picture appear larger on the screen pressing the **Zoom** (⊕) button.

- 1 Press the **Zoom** (⊕) button.
- 2 Select the area you want to zoom using the **Arrow** buttons and then press the **OK** button.
Picture is enlarged two times.
- 3 Each time you press the **Page** (▲/▼) buttons, the picture is enlarged two or four times.
Press the **Arrow** (▲/▼/◀/▶) buttons to change the location at the lower right of display.
- 4 To cancel the Zoom function, press the **Zoom** (⊕) button twice or **Back or Exit** (↵) button.



Channel List

You can see the TV or Radio Channel List pressing the **OK** button while watching TV or listening to the Radio. Switch the channel list pressing the **TV/Radio** (TV/R) button. The icon (€) behind the channel name symbolises scrambled channel, and the (Ⓐ) icon behind the channel name symbolises indicates a locked channel.

Select channel using the **Arrow** (▲/▼/◀/▶), **PR+/-**, or **Page** (▲/▼) buttons and press the **OK** button to watch. Press SAT button to show CH list for each satellite.


The colored buttons show the channel lists as follows:

- **RED(MoSAic)** button: by alphabetical order (alphabetical A-Z)
- **GREEN(Sleep)** button: by satellites (all/searched satellites)
- **YELLOW(Audio)** button: by names of broadcasting providers
- **BLUE(INFO)** button: by Favorite groups
- **F1 button**: New Channel Scanning Function



To view channel list in specific order (Alphabet/Satellite/Provider/Favorites)

- 1 Press the **Coloured (Red /Green/ Yellow/Blue)** button. Channel list is highlighted.
- 2 Select **Alphabet, Satellite, Provider, or Favorites** using the **Arrow (▲/▼)** buttons. The channel list is sorted automatically by your selection.
- 3 Select the channel pressing the **Arrow (▲/▼)** or **Page (▲/▼)** buttons and press the **OK** button to watch it.

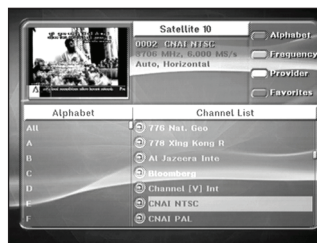

Note

- Favorite group must be set to choose.


Electronic Program Guide (EPG)

EPG displays program information such as program titles, broadcasting schedule, Program synopsis and such EPG service differ depending on the service provider.

- 1 Press the **EPG (⏏)** button while watching TV or listening to the Radio EPG information appears.
- 2 Select a program for further more information.
 - **Arrow (▲/▼) buttons:** Selects a program by channel
 - **Arrow (◀/▶) buttons:** Selects a program by time & date within the same channel. It displays the program list at 30 minutes intervals.
 - You can see the detailed information by pressing **Page (▲/▼)** buttons with RCU.
- 3 Press the **OK** button, detailed information on the selected event appears.
- 4 To exit from the Guide mode, press the **Back or Exit (⏏)** button.



Menu Map

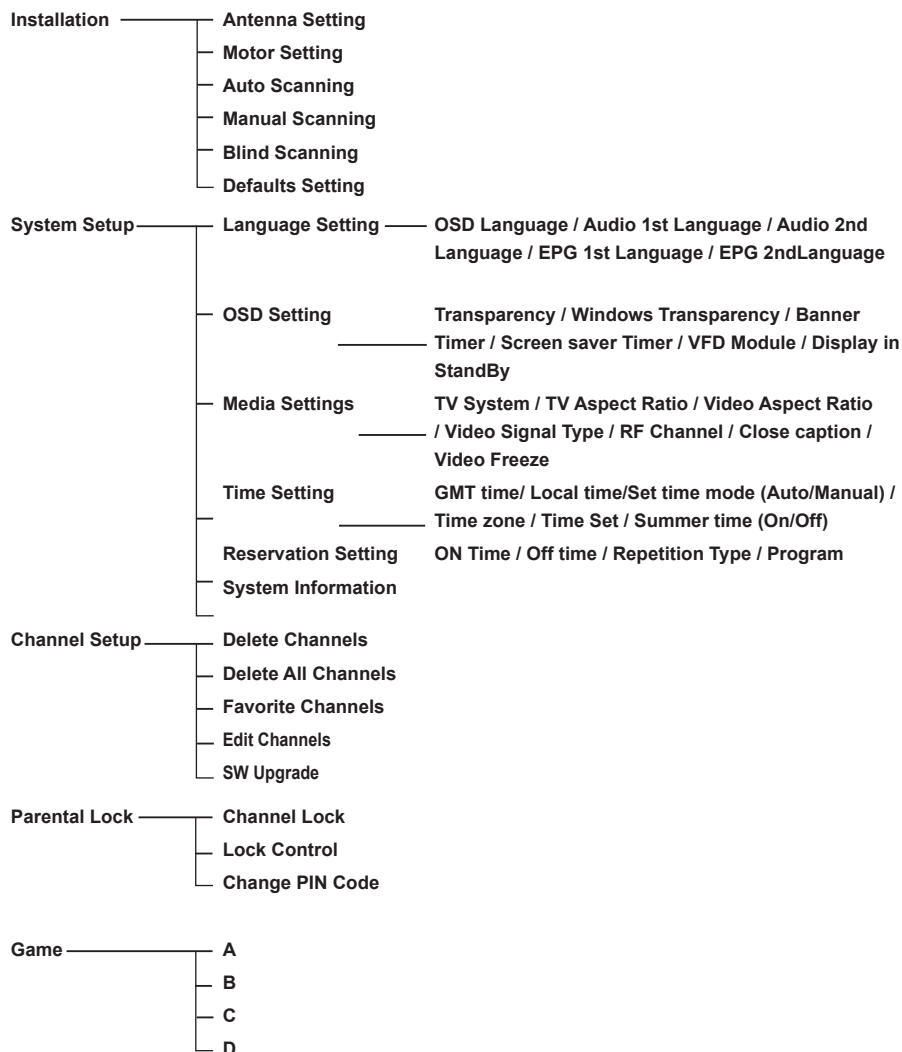

Main Menu

The menu has been carefully designed from user-friendly point of view to assure easy operation to your receiver. The main menu is classified into 7 sub menus that will carry out the various operations individually.

Installation

In the **Installation** menu, you can customise antenna setting, channel scanning, and software upgrade. Press the **Menu** (||||) button.


Select **Installation** using the **Arrow** (◀/▶) buttons on the main menu.

Installation >> Antenna Setting

Antenna Setting

You can set antenna and LNB information for scanning channels. If antenna is not correctly set, you cannot scan channels, therefore you cannot watch any programmes.

- 1 Select **Antenna Setting** using the **Arrow** (▲/▼) buttons and press the **OK** button.
Antenna setting menu appears.
- 2 Select satellite for channel scan using the **Arrow** (▲/▼) or **Page** (▲/▼) buttons and press the **Arrow** (◀/▶) button to select at option.
- 3 Select an option using the **Arrow** buttons.

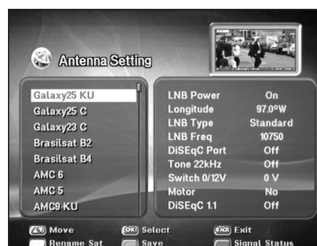

◆ LNB Power

Set LNB Power On.

◆ Longitude

If you know the exact longitude of your location, use the **Numeric (0~9)** buttons. Toggle between **E (East)** and **W (West)** using the **Arrow** (◀/▶) buttons.

◆ LNB Type(Unicable)

Select the **LNB type** by pressing **Arrow** (◀/▶) button

- Universal 1 (9750 / 10600)
- Universal 2 (9550 / 10750)
- Unicable (1210 IF / 1420 IF / 1680 IF / 2040 IF)
 - Select the **Unicable** and press **OK** Button to choose one IF by Auto detection
(When you use Unicable, Blind Scan function will be not supported)
- User Define (LNB Low / LNB High)
 - LNB IF Frequency can be input with numerique key with RCU
- Standard (5150 / 9750 / 10000 / 10600 / 10750 / 11250 / 11300 / 11475)

- The LNB is located at the satellite dish antenna. It amplifies the very weak received satellite signal then converts the received microwave satellite signal so that the signal may not decrease the gain between the dish and your receiver.

You can select one mode among **DiSEqC Port1~4 for 1.0** and **Tone Burst 1~2 and Off**.

- A standard through which it is possible to let a DiSEqC compatible receiver send a signal over the RF cable to a switching device to switch between different LNBs or dishes. The DiSEqC uses the 22kHz signal to control the switching device.

Installation >> Motor Setting

Motor Setting

◆ DiSEqC 1.2

When Motor is set to **DiSEqC 1.2** in the Antenna Setting menu.

- 1 Select **Motor Setting** using the **Arrow (▲/▼)** buttons and press the **OK** button.
- 2 Select a satellite using the **Arrow (▲/▼)** buttons and press the **OK** button. Satellite list appears. Select satellite using the **Arrow (▲/▼)** buttons and press the **OK** button. Bulleted list indicates selected satellites.
- 3 Press the **RED(MoSAic)** button to save selected satellites and then press the **Back or Exit (↵)** button.
- 4 If you press the **YELLOW(Audio)** button, on-screen navigation menu is highlighted. Use the **Arrow** buttons to move the motor to the west, east, north, and south in order. The position of the motor can be restricted to the software setting limits (West/East) using the **RED(MoSAic)/BLUE(INFO)** buttons.
- 5 Press the **YELLOW(Audio)** button to highlight **Satellite**.
- 6 Press the **OK** button on the **Go to satellite** menu. Dish changes its position to the direction of satellite (depending on the types of motor, dish changes its position to the default-direction of satellite for the maximum 28 satellites).
- 7 Press the **OK** button on the **Save Current Position** menu. Current position of the motor is saved according to the selected satellite.
- 8 You can change the Function Menu(**Go to Ref. Position / Reset Position / Calculate Positions**) by using the Arrow (◀/▶) button, activate the function with OK button
 - **Go to Ref. Position:** Press the **OK** button in the **Go to Ref. Position** menu. Motor changes its position to the zero longitude/ latitude where the count begins.
 - **Reset Position:** Reset Positioner initialises the position of motor to the default value.
 - **Calculate Positions:** Calculate Positions selects one satellite to revise the position of motor and saves the changes. Changed position of the motor also applies to the directions for other satellites.



- ◆ **USALS**

- 1 Select **Motor Setting** using the **Arrow (▲/▼)** buttons and press the **OK** button.
- 2 Select **Satellite** menu using the **Arrow (▲/▼)** buttons and press the **OK** button. Satellite list appears. Select satellite using the **Arrow (▲/▼)** buttons and press the **OK** button. Bulleted list indicates selected satellites.
- 3 Press the **RED(MoSAic)** button to save selected satellites and then press the **Back or Exit (↵)** button.



- Öä dā cā Ó Á Ü Ö c!} æ } æ Á Á , È • ã ä ã æ B { Á Á æ • Ö , • ã ä ã æ B {

◆ Positioner

-
- Motor Control**
- Positioner**
 [29] Galaxy25 KU(97.0°W)
 11749MHz, V. 7232K/s
- Go to Satellite
 Save current Position
 Calculate Positions
 Enable Limits
- Continuous**
 None
- Status: Stop**
- Signal Status 48%
- Switch** **Exit** **Move** **Motor** **[OK] Select**

that your motor is working correct.

Auto Scanning

-
- Auto Scanning**
- | | | | |
|--------------|-----|--------------|-----|
| Galaxy25 KU | All | Brasileat B3 | Off |
| Galaxy25 C | Off | AMC3 C | Off |
| Galaxy23 C | Off | AMC3 Ku | Off |
| Brasileat B2 | Off | Galaxy28 C | Off |
| Brasileat B4 | Off | Galaxy28 Ku | Off |
| AMC 6 | Off | Galaxy11 C | Off |
| AMC 5 | Off | Galaxy11 Ku | Off |
| AMC9 KU | Off | Galaxy28 C | Off |
-

Manual Scanning

-
- Manual Scanning**
- | | | | |
|------------------------|--------------|------------|------|
| Satellite | Satellite ID | Scan Mode | All |
| Transponder | 1 / 4 | NIT Search | Off |
| Frequency | 3706 Mhz | PID Search | No |
| Symbol Rate | 6,000 MS/s | Video PID | Auto |
| FEC | Auto | Audio PID | Auto |
| Polarity | Horizontal | PCR PID | Auto |
| MediaCorp Technologies | | | |
| Strength | 87% | | |
| Quality | 73% | | |
- Switch
 Move
 Sat Scan
 Edit
- Exit
 Open List
 Edit TPs

Select the satellite by using Arrow (▲/▼ ◀/▶) buttons or Page (⏴/⏵) buttons.

Sets the transponder for the selected satellite.
Select a transponder using the **Arrow** (◀/▶) buttons.

If you cannot find your desired transponder, select **New** to change transponder information as follows:

- **Frequency**
Displays the selected TP Frequency.
- **Symbol Rate**
Displays the selected TP Symbol Rates.
- **FEC (Forward Error Correction)**
Select a FEC option Auto, 1/2, 2/3, 3/4, 5/6, and 7/8 using the Arrow buttons.
- **Polarity**
Select a polarity value among Horizontal, Vertical, Circular Left, and Circular Right using the Arrow buttons.
- Horizontal output is 18V and Vertical output is 13V via LAN.

Note

- What is Transponder?
A wireless communications device usually attached to a satellite. A transponder receives and transmits incoming signals with in a prescribed frequency range. After receiving the signals the transponder will broadcast those signals with different frequencies.
-

◆ Scan Mode

Decide whether to find free channels only or all the channels including scrambled ones. Select a scan mode using the **Arrow (◀/▶)** buttons.

- **All**: Scans all types of channels.
- **Free**: Scans free channels only.

◆ NIT Search

You will be asked whether to search channels for another transponder.

Select either **Yes** or **Off** using the **Arrow (◀/▶)** buttons.

Select **Yes** to run Network Search.

◆ PID Search

You can manually scan channels by entering individual Packet Identifier (PID) values.

Enter the PID the **Numeric (0~9)** buttons.

First, select a PID type (**Video PID**, **Audio PID**, or **PCR PID**) using the **Arrow (◀/▶)** buttons, then enter the PID value by pressing the **Numeric (0~9)** buttons.


- 3 Press the **OK** button, then starts scanning.
After Auto Scanning is complete, you can see TV and Radio channels found from Auto Scanning.
- 4 Press the **RED(MoSAiC)** button on the Manual Scan menu
 - **Satellite:** Select the satellite by using Arrow (▲/▼ ◀/▶) buttons or Page (▲/▼) buttons
 - **Transponder:** Change the TP with the **Arrow** (◀/▶) buttons
 - **Frequency:** Displays the current Frequency
 - **Symbol Rate:** Displays the current Symbol Rate
 - **FEC (Forward Error Correction):** Displays the current FEC
 - **Polarity:** Displays the current Polarity
 - **Add TP:** Press the Green(sleep) button for a new TP add
 - **Del TP:** Delete the current TP with **Yellow(Audio)** button
 - **RED(MoSAiC) button:** Save the TP information

Installation >> Blind Scanning

Blind Scanning

When you don't have any transponder information, you can use this function to have all channels from selected satellite.

- **Satellite:** Select the satellite by using the Arrow (◀/▶) buttons
- **Frequency start:** Input a Frequency for scanning start with Numeric key
- **Frequency stop:** Input a Frequency for scanning stop with Numeric key
- **Frequency step:** Select the scanning step with the Arrow(◀/▶) buttons
- **Polarity:** Select the polarity with the Arrow(◀/▶) buttons.
- **Scan mode:** Select the Scan mode(All/Free) by using the Arrow(◀/▶) buttons Press OK button to start blind scan If LNB Type is set to Unicable, Blind scan is not supported.

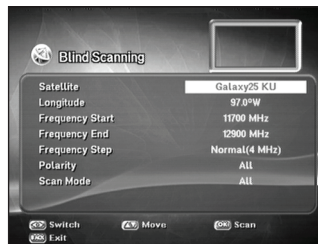

*Installation >> Defaults Setting***Defaults Setting**

You can restore the default settings in case you have encountered some problems after saving changes to channel data and others that may be in error.

- 1 Select **Defaults Setting** using the **Arrow (▲/▼)** buttons on the **Installation** menu and press the **OK** button.
- 2 Select a defaults option (**TP Auto roll**, **Factory Defaults**, or **STB Reboot**) using the **Arrow (▲/▼)** buttons and press the **OK** button.
 - **TP Auto roll:** Resets back to the additional TP list.
 - **Factory Defaults:** Resets back to the factory- default settings.
If you press the **OK** button in this menu, you will see a dialog box asking you to confirm the channel defaults or factory defaults setting.
Select **Yes** or **No**, and press the **OK** button.
 - **STB Reboot**
If you press the **OK** button in this menu, the Set-top box (STB) reboots.

System Setup

You can set the system configuration in this menu. Press the **Menu (□□□)** button. Select **System Setup** using the **Arrow (◀/▶)** buttons on the menu.

*System Setup >> Language Setting***Language Setting**

You can set languages for OSD, Audio1- 2, and EPG1- 2.

- 1 Select **Language Setting** using the **Arrow (▲/▼)** buttons on the **System Setup** menu and press the **OK** button.
- 2 Select any of **OSD**, **Audio1- 2**, and **EPG1- 2 Languages** using the **Arrow (▲/▼)** buttons and use the **Arrow (◀/▶)** buttons to select its language.

System Setup >> OSD Setting

OSD Setting

You can adjust OSD Transparency, Window Trans OSD Banner Time, and Screen saver Time.

- 1 Select **OSD Setting** using the **Arrow (▲/▼)** buttons on the **System Setup** menu and press the **OK** button.
- 2 Select any of **Transparency**, **Window Trans**, **Screen saver Time**, **VFD Module** and **Display in Standby Mode**, and **Screen saver Time** using the **Arrow (▲/▼)** buttons and use the **Arrow (◀/▶)** buttons to make changes.
 - **Transparency:** 0 (opaque) to 100%
 - **Window Trans:** 0 (opaque) to 100%
 - **Banner Time:** 1 to 60 seconds or Always
 - **Screen saver Time:** 1 to 60 minutes or None
 - **VFD:** On or Off
 - **Display in Standby:** On or Off



System Setup >> Media Settings

Media Setting

You can enter the various media settings for TV System, TV Aspect Ratio, Video Aspect Ratio, RGB, Y/Pb/Pr or Composite, RF Channel, Closed caption, Video Freeze.

- 1 Select **Media Setting** using the **Arrow (▲/▼)** buttons on the **System Setup** menu and press the **OK** button.
- 2 Select **Media Setting** using the **Arrow (▲/▼)** buttons and press the **Arrow (◀/▶)** buttons to make changes.
 - **TV System :** PAL, SECAM, NTSC, and AUTO
 - **TV Aspect Ratio :** You can set the aspect ratio of your TV. (4:3 or 16:9)
 - **Video Aspect Ratio :** You can select the display format according to TV screen ratio. (Letter Box, Pan & Scan, Mixed, or Full)
 - **Video signal type :** RGB, Y/Pb/Pr or Composite
 - **RF Channel :** You can select the external switch for the TV. (CH3 or CH4)
 - **Close caption**
 - **Video Freeze :** On/Off



System Setup >> Time Setting

Time Setting

You can set the time zone.

- 1 Select **Time Setting** using the **Arrow (▲/▼)** buttons on the **System Setup** menu and press the **OK** button.

- ◆ **Set Time mode:** Set Auto or Manual mode

Press the **Arrow (◀/▶)** buttons to set time mode for Auto or Manual

- ◆ **Time Zone**

Press the **Arrow (◀/▶)** buttons to set the time zone, The local time will be automatically changed by this setting.

Set the time by using the **Arrow (◀/▶)** buttons in case of

Auto set time mode

Input the figures with the numeric keys in case of **Manual set time mode**

Select the summer time function **on** or **off**

- ◆ **Summer Time**

Press the **Arrow (◀/▶)** buttons to set the Summer Time option. for on/off.

- ◆ **Clock Type**

Press the **Arrow (◀/▶)** buttons to set the Summer Time option. for 24 Hour or AM/PM




System Setup >> Reservation Setting

Reservation Setting

You can set timer of reservation for TV program such as switch on, off and TV program. Select the Event No. for the reservation.

- **ON time:** Input the Switch-ON time with numeric keys
- **OFF time:** Input the Switch-OFF time with numeric keys
- **Repetition:** Select the Event activation time option(Once, Daily, one day a week) with the **Arrow (◀/▶)** buttons.
- **Program:** Select the channel with **Arrow (◀/▶)** button and press **OK** to save.

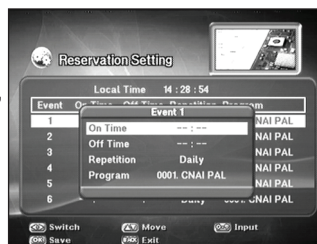

System Setup >> System Information

System Information

You can check system information like Model Name, Hardware version, Loader version, Main Software Version, and Main Software Build Date.

Channel Setup

You can edit TV and Radio channels and the favorite channel group in this menu.

Press the **Menu** (||||) button. Select **Channel Setup** using the **Arrow** (◀/▶) buttons on the main menu.

Channel Setup >> Delete Channel

Delete Channel

You can delete TV and Radio channels you want.

- 1 Select **Delete Channel** using the **Arrow (▲/▼)** buttons on the **Channel Setup** menu and press the **OK** button.
- 2 Select the channel you want to delete using the **Arrow (▲/▼)** buttons and press the **OK** button. Press the **Arrow (◀/▶)** buttons to switch between TV and Radio List. You can select multiple channels. Bulleted list indicates selected channels. Press the **Green(sleep)** button for Delete mode by Channel, TP or Satellite.
- 3 Press the **RED(MoSAiC)** button to delete selected channels.



Channel Setup >> Delete All Channels

Delete All Channels

You can delete all channels.

- 1 Select **Delete All Channels** using the **Arrow (▲/▼)** buttons on the **Channel Setup** menu and press the **OK** button. System message dialog box appears asking you to confirm it.
- 2 Select **Yes** using the **Arrow (◀/▶)** buttons and press the **OK** button to delete all channels.



Channel Setup >> Favorite Channels

Favorite Channels

You can edit favorite channels. There are 9 Favorite channel groups (**News, Sports, Movie, Music, Shopping, Kids, Adults, Drama, and Education**).

- 1 Select **Favorite Channels** using the **Arrow (▲/▼)** buttons on the Channel Setup menu and press the **OK** button.



- Channel Setup >> Edit Channels**

You can rename the channel list.

- **FAV (♥)** button: Shows Favorite channel lists

- ### To rename the channel list

- 4** Press the **OK** button to confirm.

SW Upgrade

- 1 Select **Software manager** using the **Arrow (▲/▼)** buttons on the **Installation** menu and press the **OK** button.

- 32 English Öä dā cā Á Á Ú Á c | æ } æ Á Á , È • ä ä ä æ È { Á Á æ • Ö , • ä ä ä æ È {

Parental Lock

Channel Lock

- 1 Select **Channel Lock** using the **Arrow** (▲/▼) buttons on the Parental Lock menu and press the **OK** button.
- 2 Select the channel that you want to lock using the **Arrow** (▲/▼), **PR+/-**, **Page** (⬆/⬇), or **Numeric (0~9)** buttons and press the **OK** button.

Selected channels will be displayed with locking-marked.
Press it again to clear.

Arrow (◀/▶) buttons: Switches between TV and Radio List.




- 3 Press the **RED(MoSAiC)** button to confirm.
- 4 Press the **Blue(Info)** button to move PIG screen.



Parental Lock >> Lock Control

Lock Control

Whenever you want to use the locked system you will be prompted to enter the PIN Code in the request dialog box. Using **Arrow** (▲/▼) buttons and press **OK** button to select a lock status

- **System Lock:** Select Lock or Unlock by using the **Arrow**() button. If Lock is selected, the front key function will be blocked.
- **Menu Lock:** Select Lock or Unlock by using the **Arrow**() button Submenu Lock control will be available with PIN code
- **Lock mode:** Select Once or Every time mode by using **Arrow**() button
- **Once:** Input the pin code once on the channel change with Parental Lock
- **Every time:** Input the pin code everytime on the channel change with Parental Lock Save the changes with OK button Press the **Blue(Info)** button to move PIG screen




Parental Lock >> Change PIN Code

Change PIN Code

You can create a new PIN code in this menu. "0000" is the default password.

- 1 Select **Change PIN Code** using the **Arrow (▲/▼)** buttons on the **Parental Lock, System Lock, Menu Lock** and press the **OK** button.
- 2 Enter the old PIN code.
- 3 Enter the new PIN code.
- 4 Enter the new PIN code again to confirm.

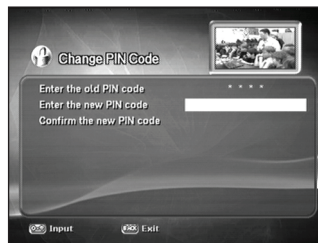

Note

- Please keep in mind that the PIN code must be a four-digit number. In case you forgot your PIN code, contact your local dealer.

Game

This product provides lots of games for your entertaining environment.

Select Game using the **Arrow (◀/▶)** buttons on the main menu.

- 1 Select a game using the **Arrow (▲/▼)** buttons on the Game menu and press the **OK** button.
- 2 According to the instruction displayed on screen, you can enjoy games using the **Arrow**, **Numeric (0~9)**, and **OK** buttons.

Troubleshooting

Problem	Solution
No display LED on the front panel. No power supply	Plug the power cord correctly.
No Picture	Ensure that the STB is switched on. Check the connection status. Check channels and Video output status.
Poor picture quality	Check the signal level. If this is too low, try adjusting the alignment of your dish.
No Sound	Check the volume level of the TV and STB. Check the mute status of the TV and STB. Check the connection of audio cable.
Remote Control does not operate	Point remote control directly towards your receiver. Check and replace batteries. Check if anything blocks the front panel.
Service is not running or scrambled.	Make sure the smart card is appropriate for the selected service.
You have forgotten your PIN code.	See chapter 5, "Parental Lock" in this User's manual.

Demodulation	Waveform	QPSK
	Symbol Rate	2 ~ 45 Msps
	Code Rate	1/2, 2/3, 3/4, 5/6, 7/8
Video Encoder	MPEG-2	MPEG-2 MP@ML
	Data Rate	15 Mbits/s
	Video Standard	NTSC
	Aspect Ratio	4:3, 16:9
Processor & Resources	Processor	STI 5119AL
	SDRAM	16 Mbyte
	Flash	2 Mbyte
	EEPROM	64 Kbit
LNB Input	Connector	IEC 169-24, F Type
	Input Frequency	950 ~ 2150 MHz
	LNB Voltage	13/18V
	Tone Switch	22 kHz
S-VHS		S-Video OUT
Component		Y,Pb,Pr OUT
12V Switch	S/W controlled	0 or 12V
	Current	50 mA MAX.
SPDIF	Coaxial	O
	Optical	O
Audio Output	Connector	2 RCA (L/R)
Video Output	Connector	1 RCA
RF Modulator	Connector	IEC 169-24, F Type
	Output	NTSC
	Channel	CH3 or CH4 by Switchable
RS232 Port	Connector	D-SUB Type
	Speed	115,200 bps
Power Supply	Type	SMPS
	Input Voltage	AC100 - 240V~, Max.25W 50/60Hz
Front Panel	Buttons	7 (UP, DOWN, LEFT, RIGHT, OK, MENU, POWER)
Connectors	Compont	O
	S-Video	O
	RS232C	O
	RCA	O
	0-12V	O
	SPDIF	O
	RF Modulator	O
Mechanical	Dimension	300 X 220 X 63
	Weight	2 KG

memo

memo